



How to inquire Miner Reboot cause :

Power on the miner ,If the miner reboot ,you could check reboot cause as following :

1. input miner IP address and input the username and password.

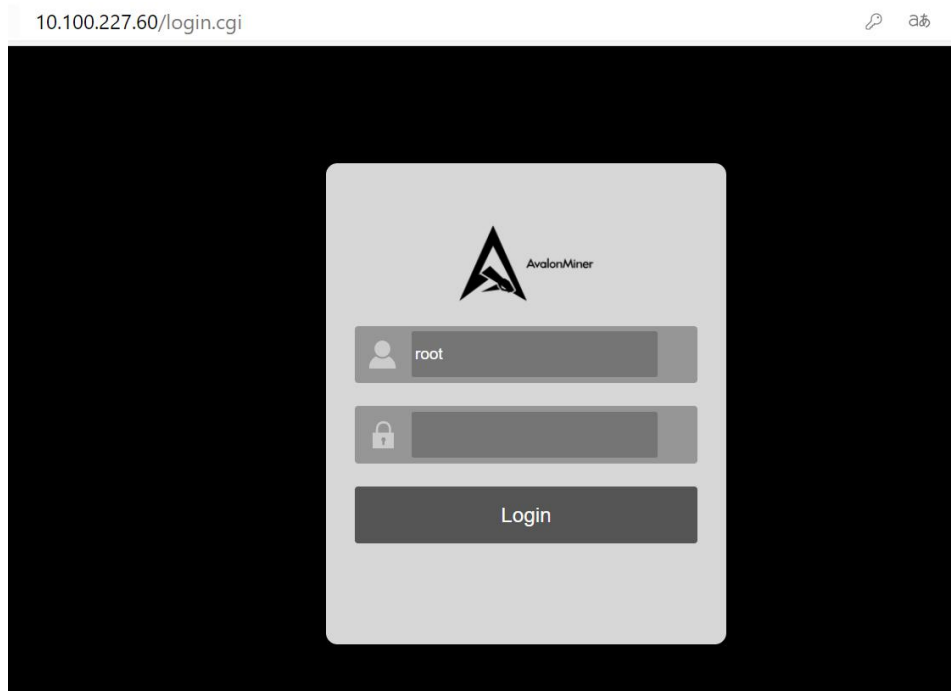

2. click the log and check the BOOTBY code.

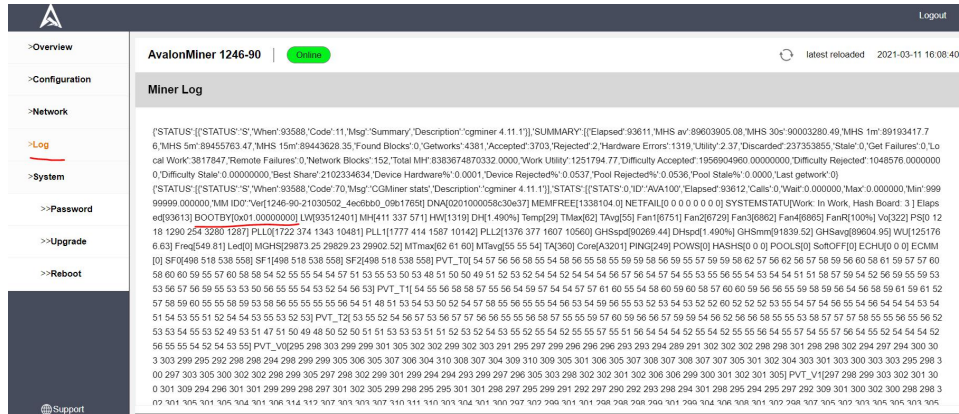

AM_BOOTBY_POWRON = 0x01	Hard restart or unknown reason restart
AM_BOOTBY_OVERHEAT = 0x02	Overhot, some firmware is 0A1E
AM_BOOTBY_NETFAIL = 0x03	Network problem
AM_BOOTBY_WEB = 0x04	Network backstage restart
AM_BOOTBY_API = 0x05	API Restart
AM_BOOTBY_NOSHARE = 0x11	No hashrate in 5 minutes
AM_BOOTBY_LOW_HASHRATE = 0x12	Hashrate lower than 70% (some firmware is different)
AM_BOOTBY_SOFTON = 0x21	Soft restart